GENERAL CONDITIONS OF THE HORIZONTAL LIFELINE LP 120 UTILIZATION

- IDENTITY CARD should be filled in by a competent person and kept during whole period of the horizontal lifeline using.
- FIRST USE fill in the Identity Card.
- PERIOD INSPECTIONS annual inspection must be done by a competent person. Whole parts of the horizontal lifeline LP 120: the rope tensioner, snap hooks, ropes, splices, must be controlled in respect of mechanical, chemical and thermal defects. The result of inspection must be recorded in Identity Card.
- OUT OF SERVICE the horizontal lifeline LP 120 must be out of service and destroyed after being used to arrest a fall.

The horizontal lifeline LP 120 must be out of service and sent to manufacturer or their representation when any defects will appear during annual or everyday use inspection. Out of service must be done by a competent person.

TIME OF USAGE - there is no limit of usage of the rope grab but after first five years of using must be made a subject to fabric control.

The fabric control can be made by:

- manufacturer
- or person recommended by manufacturer
- or company recommended by manufacturer.

During fabric control will be established time of usage of the working rope tensioner till next fabric control. Working and connecting rope must be out of service and destroyed after five years of usage.

- STORAGE the horizontal lifeline LP 120 must be stored in a dry, ventilated, room temperature and free of sun places.
- CLEANING clean the horizontal lifeline LP 120 in a warm water and household soap. Do not use any acid or basic solvents. After cleaning the harness must be natural dry far away from any fire and heat.
- REPAIRS it is strictly forbidden to make any repairs and modifications to the horizontal lifeline LP 120 by yourself.
- TRANSPORT- the horizontal lifeline LP 120 must be transported in the package (for example: impregnated textile, foil bag or plastic, steel box) avoid moisture mechanical and chemical or others defects.

IT IS THE RESPONSIBILITY OF THE USER ORGANISATION TO PROVIDE THE IDENTITY CARD AND TO FILL IN THE DETAILS REQUIRED.

THE IDENTITY CARD SHOULD BE RIFIELD IN SEPTIAE BY A COMPETENT PERSON, RESPONSIBILITY. AND THE USER ORGANIZATION FOR PROTECTIVE EQUIPMENT.

ANY INFORMATION ABOUT THE EQUIPMENT LIKE PERIODIC INSPECTIONS, REPRINES, REAGONS OF EQUIPMENTS WITHOUT SEYMENT SHOULD BE SHALL BE NOTED INTO THE IDENTITY CARD BY A COMPETENT PERSON

THE IDENTITY CARD SHOULD BE STORAGED DURING A WHOLE PERSON OF COLUMNATURILIZATION.

DO NOT USE THE EQUIPMENT WITHOUT THE IDENTITY CARD.

MODEL AND TYP	e of equipment			
	REF. NUMBER			
SERIAL NUMBER		DATE OF MANUF.		
USER NAME				
		DATE OF	DATE OF FIRST USE	
DATE OF PURCHA	SE			

periodic examination and repair history							
	DATE	REASON FOR ENTRY PERIODIC EXAMINATION OR REPAIR	DEFECTS NOTED, REPAIRS CARRIED OUT AND OTHER REVELANT INFORMATIONS	NAME AND SIGNATURE OF COMPETENT PERSON	PERIODIC EXAMINATION NEXT DUE DATE		
1							
2							
3							
4							

Instruction Manual PROTER




EN 795:1996 CLASS B **C €** 0082 Ref. LP 120 xx

The adjustable horizontal lifeline LP 120 is a component of a personal fall arrest equipment. It should be used in situation when the worker has to move often in horizontal plane.

The adjustable horizontal lifeline LP 120 is a temporary anchor device type and is tested and complied with EN 795. The adjustable horizontal lifeline LP 120 is the protection for a single person only.

BASIC EQUIPMENT

- Working rope tensioner made of stainless steel
- Working rope made of polyamide rope ø 14 mm
- Connecting rope made of polyamide rope ø 14 mm of length 2 m

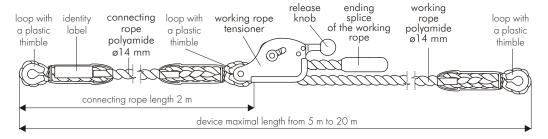

ATTENTION!

The adjustable horizontal lifeline LP 120 can be equipped only with certified (according to EN 362) snap hooks.

CONTENT OF THE DEVICE IDENTITY LABEL

material	Adjustable Horizontal LIFELINE POLYAMIDE LP 120 XX	name (type) of the device	
number of the manufacturing series	LENGTH XX m Date of manufacture: 01.2003 Serial number: 0001	month/year of the device manufacture European standard number, year and class	
CE mark and number of the identity number of notified body inspecting manufacture of the equipment (the article 11)	C € 0082 EN 795:1996- CLASS B	marking of the manufacturer or distributor	

*) xx - code of length for example: xx=20 - device length 20 m


PROTEKT 93-403 Lodz ul. Starorudzka 9 POLAND

tel.: (+48 42) 680 20 83 fax: (+48 42) 680 20 93 e-mail: protekt@protekt.com.pl EC type examination carried out by CETE APAVE SUDEUROPE, BP 193, 13322 Marseille, France - 0082

METHODS OF CONNECTING THE HORIZONTAL LIFELINE TO THE STRUCTURAL ANCHOR POINTS


Attention!


- The shape of the structural anchor points should not let self-acting disconection of the lifeline.
- The structural anchor point mustn't have sharp edges which could damage the lifeline.

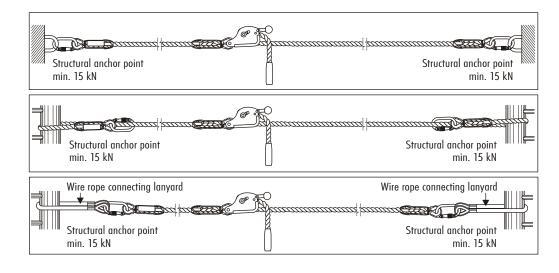

ADJUSTING THE LENGTH AND THE TENSION OF THE HORIZONTAL LIFELINE


- The tension of the horizontal lifline LP 120 is made by hand force. Pull the free ending of the working rope by hand in the direction of structural anchor point of working rope see drawing A.
- Check a locking of the working rope inside the rope tensioner by pulling the working rope drawing B. The correctly tensioned working rope shouldn't release from the tensioner.

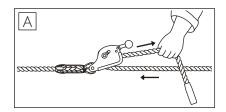

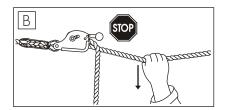


DISASSEMBLY OF THE HORIZONTAL LIFELINE

• To disassembly the lifeline raise the rope tensioner by pulling up release knob - see the drawing C. The tension of the rope will release automatically.

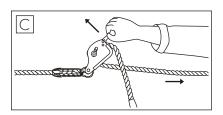

BASIC RULES OF USING THE ADJUSTABLE HORIZONTAL LIFELINE LP 120

- the horizontal lifeline must only be used by a person previously trained for working at heights.
- the horizontal lifeline is a personal equipment and should be use by one worker.
- before use the fall arrest system, the rescue operation must be introduce to avoid any danger that can happened during using the equipment.
- the horizontal lifeline should be placed above the user.
- before each use, a close visual examination of the rope tensioner, snap hooks, ropes, splices, must be done in respect
 of mechanical, chemical and thermal defects. The examination must be done by a person who is going to uset the
 horizontal lifeline. In the case of any defect or doubt of correct condition of the horizontal lifeline, do not use it.

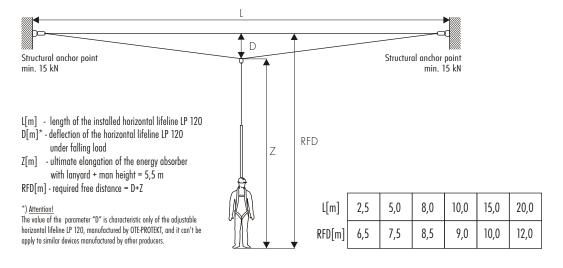

- if there is no possibility to assemble the horizontal lifeline avoiding the sag of rope, we are obliged to add a value of sag to the parameter RFD form the above table.
- when a calculated value of the RFD is higher then free distance at the particular working place we have to:
- employ an energy absorber with lanyard with shorter entire length;
- employ a permanent fall arrest system with rigid lifeline.
- using the horizontal lifeline, in connection with fall arrest system, must be compatible with manual instructions of the fall arrest systems and obligatory standards:
 - EN354 for the safety lanyards;
 - EN355 for the energy absorbers;
 - -EN361 -for the safety harness;
 - EN362 for the connectors.
- it is strictly forbidden using the horizontal lifeline in the explosion zone.
- during using the horizontal lifeline must be protected from a contact with oils, acids, solvents, basics, open fire, hot metal drops and sharp edges. We should avoid using the lifeline in the dust laden and gresy environment.
- the energy absorber with lanyard is the only fall arrest subassembly which can be used to connect the worker safety harness to the horizontal lifeline LP 120.
- adjustable horizontal lifeline LP120 has been tested to the standard EN 795 and is appropriate for single person use with certified energy absorber (according to EN355).
- it is strictly forbidden using any retractable type fall aresters or guided type fall arresters instead of the energy absorber with lanyard.
- it is strictly forbidden making any modifications to the horizontal lifline by yourself.